

Mi Casa stone products


Authorized Distributor of GenStone Products

1-866-995-1902


www.micasastone.ca

Applying to Concrete

Always keep the "positive lip" of the panel up.

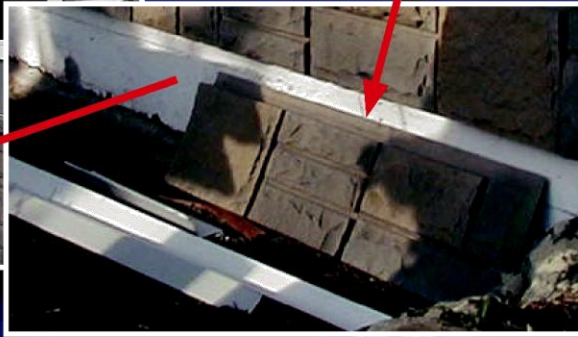

Apply polyurethane adhesive designed for use with concrete to the back of the panel.

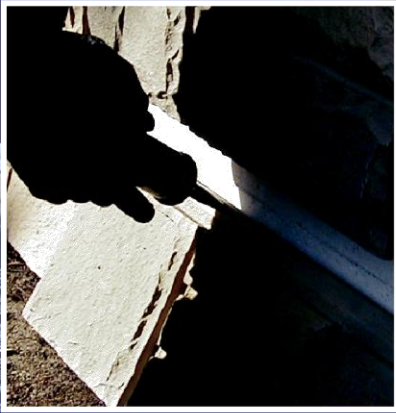

Apply textured, color-matched caulk to the positive lip before anchoring.



Roto-hammer the pilot hole before inserting or screwing concrete anchors.



Photo showing a firstner type bit for countersinking anchor hole and one of many types of concrete anchors.



Drive concrete anchor to a depth of 1/8" below flush.



Apply textured, color-matched caulk to the anchor hole.

Touch-up Paint Kits Are Available To Help Blend Caulked Areas

Check with local building codes for application

www.micasastone.ca

Toll Free 1-866-995-1902